



# IDS Lift-Net Tech Support

## Emergency Recall


The Emergency Recall Control will capture a single elevator or a group of elevators and send it to a user selected floor (*the recall floor*).

### Emergency Recall All Cars

1. Select the “recall” floor
2. Click on the RECALL ALL CARS button

All elevators will be sent to the selected “recall” floor. Doors will remain closed.

3. Click on the OPEN DOOR button to open elevator doors per car.

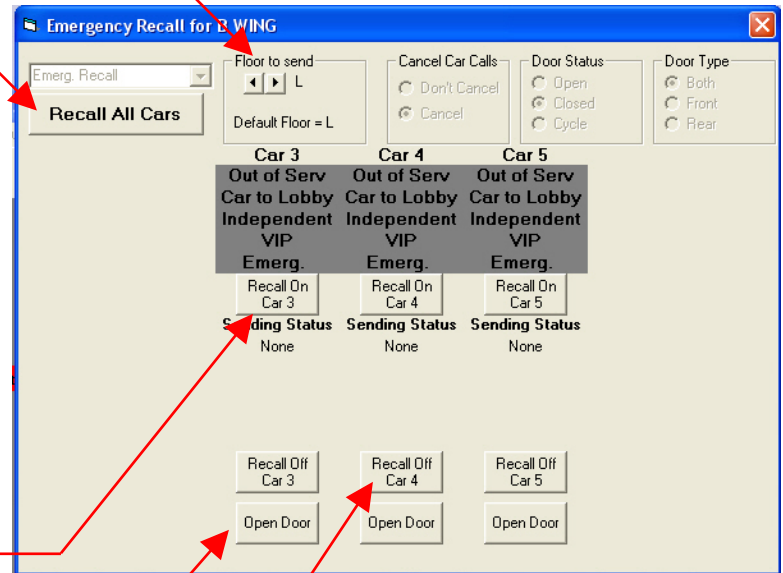

### Emergency Recall Per Car

1. Select the “recall” floor.
2. Click on the RECALL ON CAR (?) button.

Elevators will be individually sent to the selected “recall” floor. Doors will remain closed.

3. Click on the OPEN DOOR button to open elevator doors.

### To Return to Normal Service

1. Click on RECALL OFF CAR (?)




# IDS Lift-Net Tech Support

## Emergency Recall (cont'd)

The Emergency Recall Control is preconfigured with the following defaults. Upon initiation of "Recall All Cars" or recall of a single car, the following takes place.

- A. All car call buttons will be cancelled.
- B. The elevator will proceed to the selected floor (*default recall floor is Lobby*).
- C. The car doors (*front and rear*) will remain closed until the on screen "Open Door" button is clicked.

Emergency Recall default settings

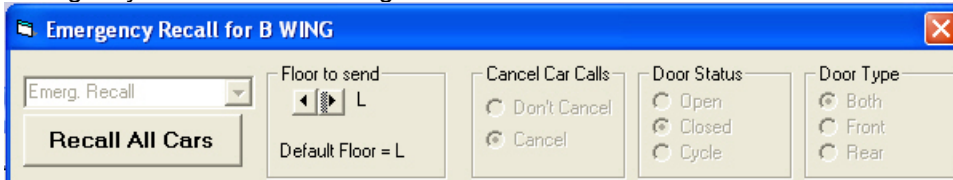


Default settings for Emergency Recall and all other Car controls may be selected from the Setup screen. (click on the SETUP button on the car controls screen. Password required)



# IDS Lift-Net Tech Support

## Changing Defaults for Car Controls

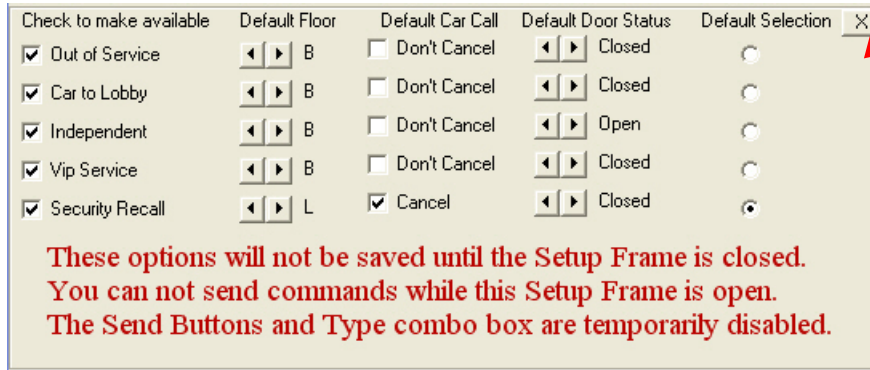

The above *screen capture* displays the “setup” screen for car controls. This screen allows changing the default settings for the car controls. The following defaults may be changed

1. Check to make Available (check the controls to be available when Car Controls is selected). Note: control must be available from MCE.
2. Default Floor (select destination floor)
3. Default Car Calls (cancel or don't cancel car calls)
4. Default Door Status (keep doors open, closed, or cycle doors upon arrival at the destination floor)
5. Default Selection (select the default control. This will be the control that is used most often, or that must be readily available in emergencies). NOTE: Emergency Recall is the factory default.

To save settings click the “X” on the setup screen